

 


SILENCER USER MANUAL



Included :

Left and Right Silencer Electronic Ear buds
Small / Medium / Large (Right / Left) Sure-Lock™ sizing fins (6 total)
Small / Medium / Large (one set for each ear) Foam tips (6 total)
Four pack of batteries
Detachable Lanyard
Cleaning Brush / Magnetic tool
Carry Case

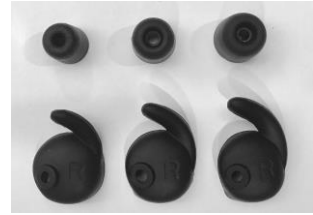

Installing batteries : (estimated battery life of 80 hours) *

Remove the foam tip and rubber fin from the Silencer to access the battery compartment. Install battery using the magnetic brush / wand.

****WARNING****

Do not mix new and old batteries.

 
Note the direction of the positive (+) and negative (-)



Operation:

Slide switch up to turn the unit ON – down for OFF

Volume is controlled by the dial – turning clockwise will increase the volume while counterclockwise will reduce the volume,.

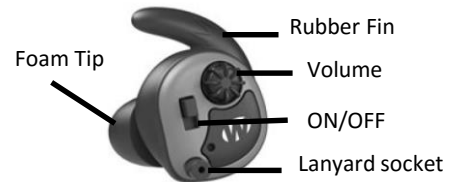

Proper Fitting :

After installing the batteries close the battery door. At this point you should try any combination of sizing fins and foam tips to obtain a good seal and secure fit. Do so with the unit in the off position.

Sure-Lock™ sizing fins slide over the housing.
Install the foam tips to the foam tip post on the device.

When ready to insert into ear. Roll and compress the foam tip between your fingers. Insert into your ear and hold in place for 10-15 seconds to allow the foam to expand and seal within your ear.

Properly sealed Silencer will significantly reduce outside noise – muffling the ambient sound. - *Be sure and have the Silencers in the OFF position when testing how well the foam tips have been seated in your ears.*



*Battery life estimate may vary based on temperature and brand of battery.

Be sure to position the Sure-Lock fin into the outer ear. This helps provide a good seal and a secure fit.



The Silencer also comes with an optional detachable lanyard. Simply insert the lanyard end into the lanyard port on each ear bud until it snaps in place.



LIMITED WARRANTY

Walker's warrants this product to the original purchaser to be free from defects in materials and workmanship, under normal use and conditions for a period of One Year from the date of the original purchase. Under this warranty, this unit will be replaced or repaired at our option, without charge for parts or labor, excluding batteries, for this period

This warranty is void if any of the following occur:

1. The warranty card was not sent in at the time of purchase
2. The unit is not owned by the original purchaser at the time of the warranty claim
3. The unit has been tampered with, opened or punctured
4. The unit has been immersed in water or other liquids, allowed to be filled with dirt or dust, or otherwise physically abused

This shall be the exclusive written warranty of the original purchaser and neither this warranty or any other warranty, expressed or implied, shall extend beyond the 12-month period listed above. In no event shall Walker's be liable for consequential damages, consequential property damage, or consequential personal injury. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

TOLL-FREE CUSTOMER SUPPORT (877) 269-8490

Return bottom portion to: GSM, LLC – PO Box 535189 – Grand Prairie, TX 75053-5189
Or you can register your product online at : www.gsmoutdoors.com

Warranty Registration

Model: _____ Date of Purchase: _____
Purchased From: _____
City: _____ State: _____ Zip: _____
Primary Use: _____
Your Name: _____
Address: _____
City: _____ State: _____ Zip: _____
Serial # : _____ Email Address: _____

FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interference cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.